
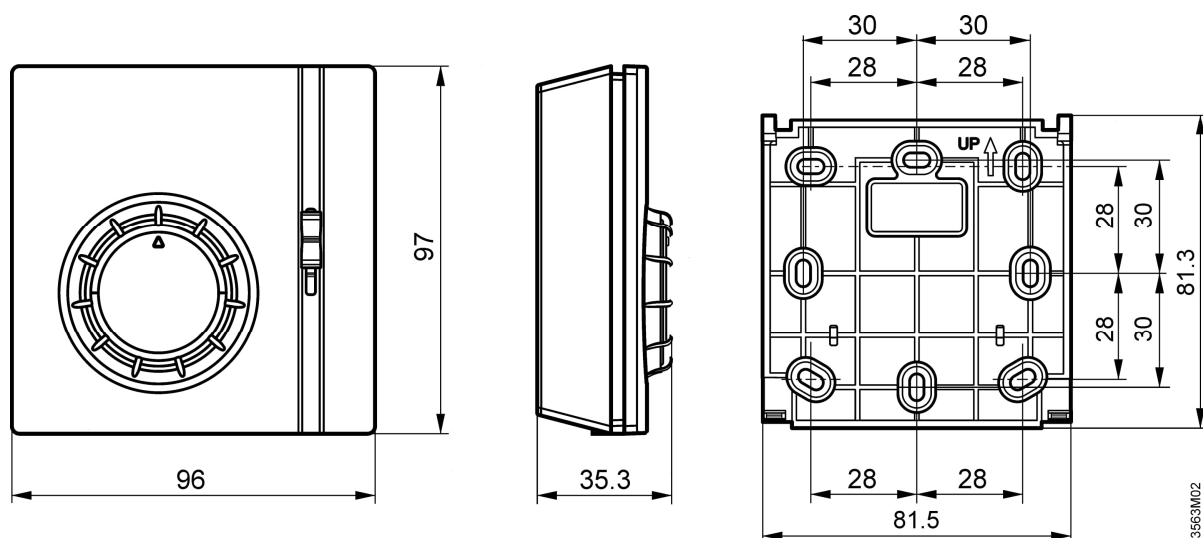


cs Montážní list
da Installationsvejledning
de Installationsanleitung
el Οδηγίες Εγκατάστασης
en Installation Instructions
es Instrucciones de montaje

fi Asennusohje
fr Instructions d'installation
hu Telepítési leírás
it Istruzioni di montaggio
nl Installatie-aanwijzing
pl Instrukcja montażu



pt Instruções de montagem
sk Návod na montáž
sv Installationsanvisning
tr Montaj talimatları
zh 安装说明书

RAA...

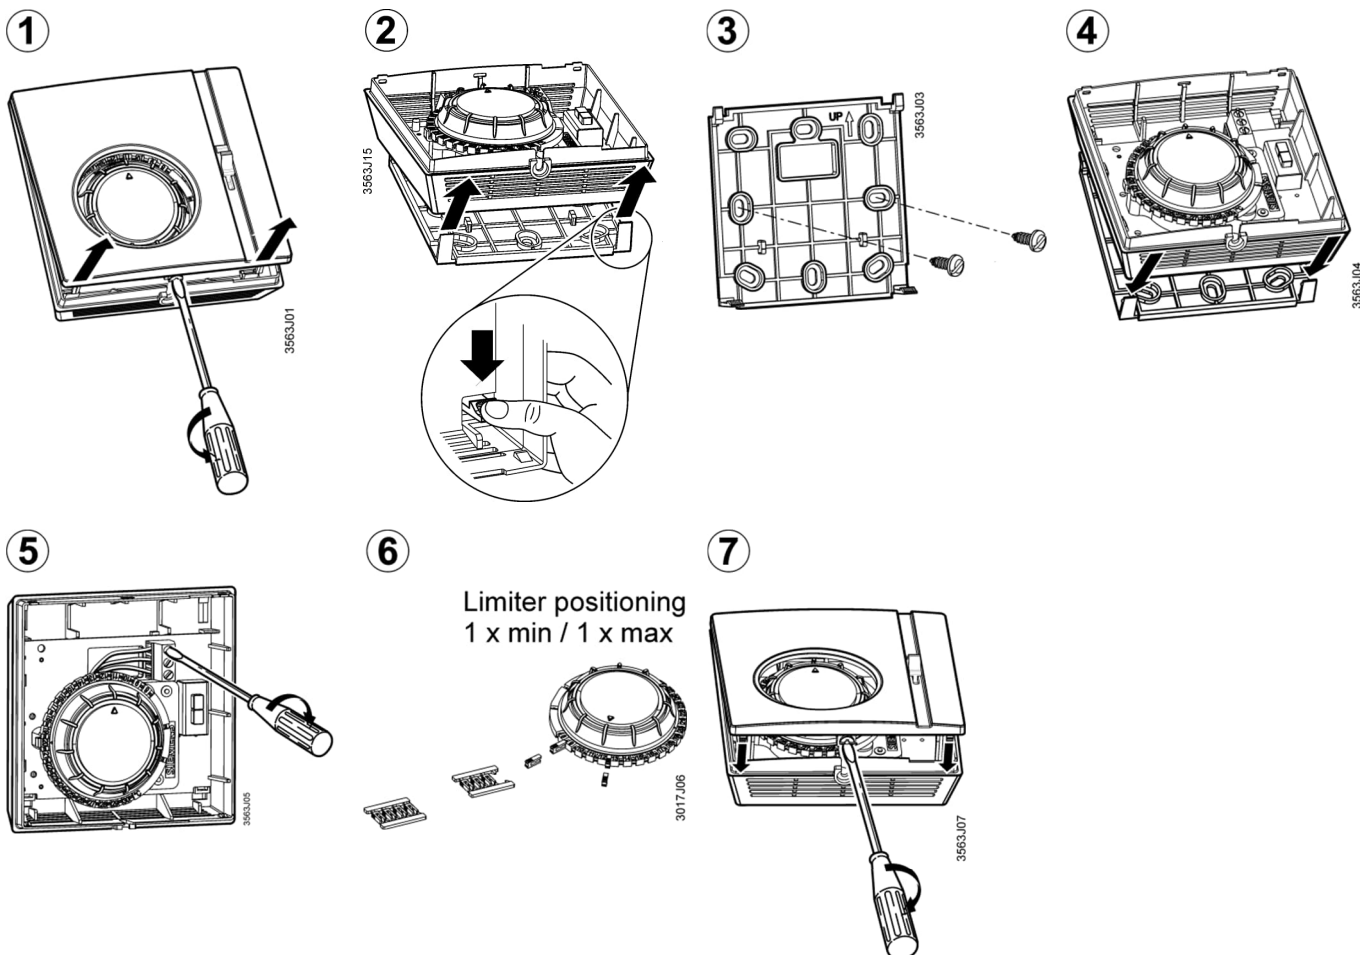



Dimensions in mm

RAA11 / RAA21 / RAA21/S

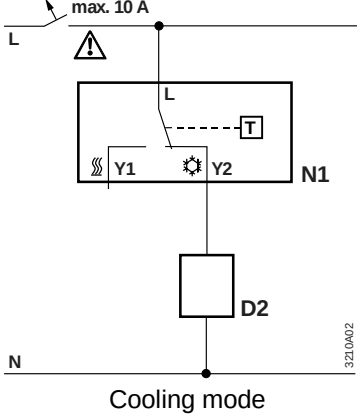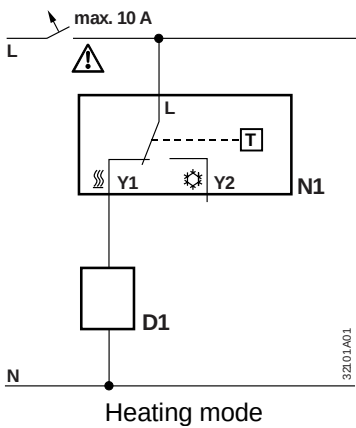


- D1 Zone valve or thermal valve for heating
- D2 Zone valve or thermal valve for cooling
- L Switching voltage
AC 24...250 V
- N1 Room thermostat
- Y1 Control output
"Heating", AC 24...250 V
- Y2 Control output
"Cooling", AC 24...250 V
- N Neutral
- T Thermostat element
(gas-filled diaphragm)

RAA31

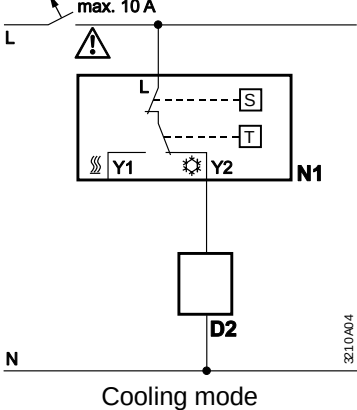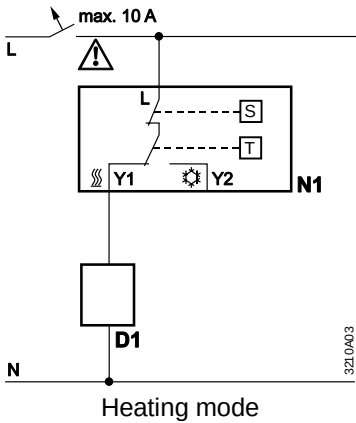


- D1 Zone valve or thermal valve for heating
- D2 Zone valve or thermal valve for cooling
- L Switching voltage
AC 24...250 V
- N1 Room thermostat
- S ON/OFF switch
- Y1 Control output
"Heating", AC 24...250 V
- Y2 Control output
"Cooling", AC 24...250 V
- N Neutral
- T Thermostat element
(gas-filled diaphragm)

RAA41 / RAA41/S

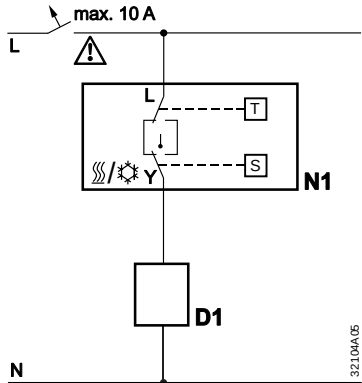

- D1 Zone valve or thermal valve for heating or cooling
- L Switching voltage
AC 24...250 V
- N1 Room thermostat
- S Selector for Heating / OFF / Cooling
- Y Control output
"Heating" or "Cooling", AC 24...250 V
- T Thermostat element
(gas-filled diaphragm)

RAA42/S

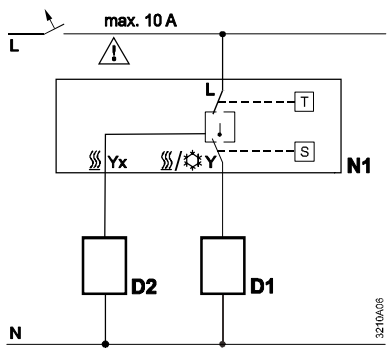

Note: D2 is only activated in heating mode.

- D1 Zone valve or thermal valve for heating or cooling
- D2 Zone valve or thermal valve for heating
- L Switching voltage
AC 24...250 V
- N1 Room thermostat
- S Selector for Heating / OFF / Cooling
- Y Control output
"Heating" or "Cooling", AC 24...250 V
- Yx Control output
"Heating", AC 24...250 V
- N Neutral
- T Thermostat element (gas-filled diaphragm)