

LIOB-A4, LIOB-A5 Adapter

Installation instructions

Instructions de montage







Montageanweisung


Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje


Monteringsanvisning

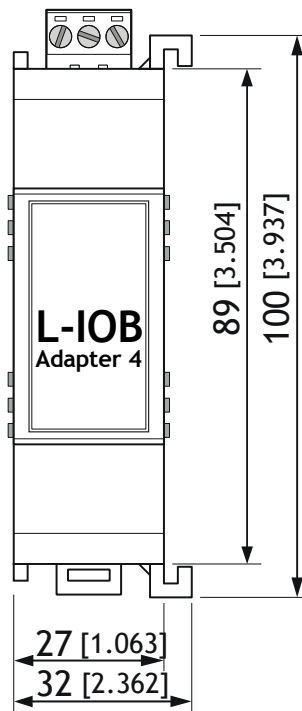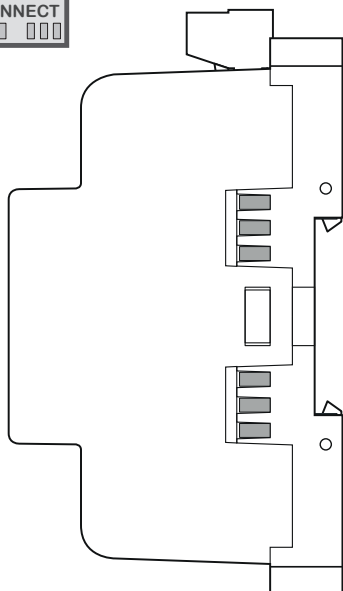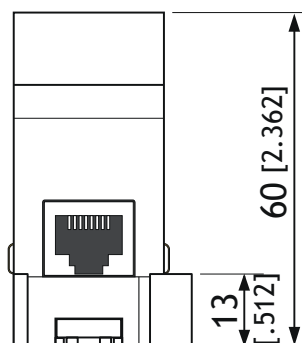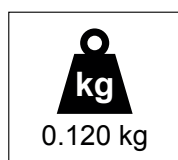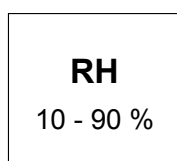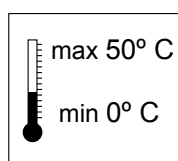

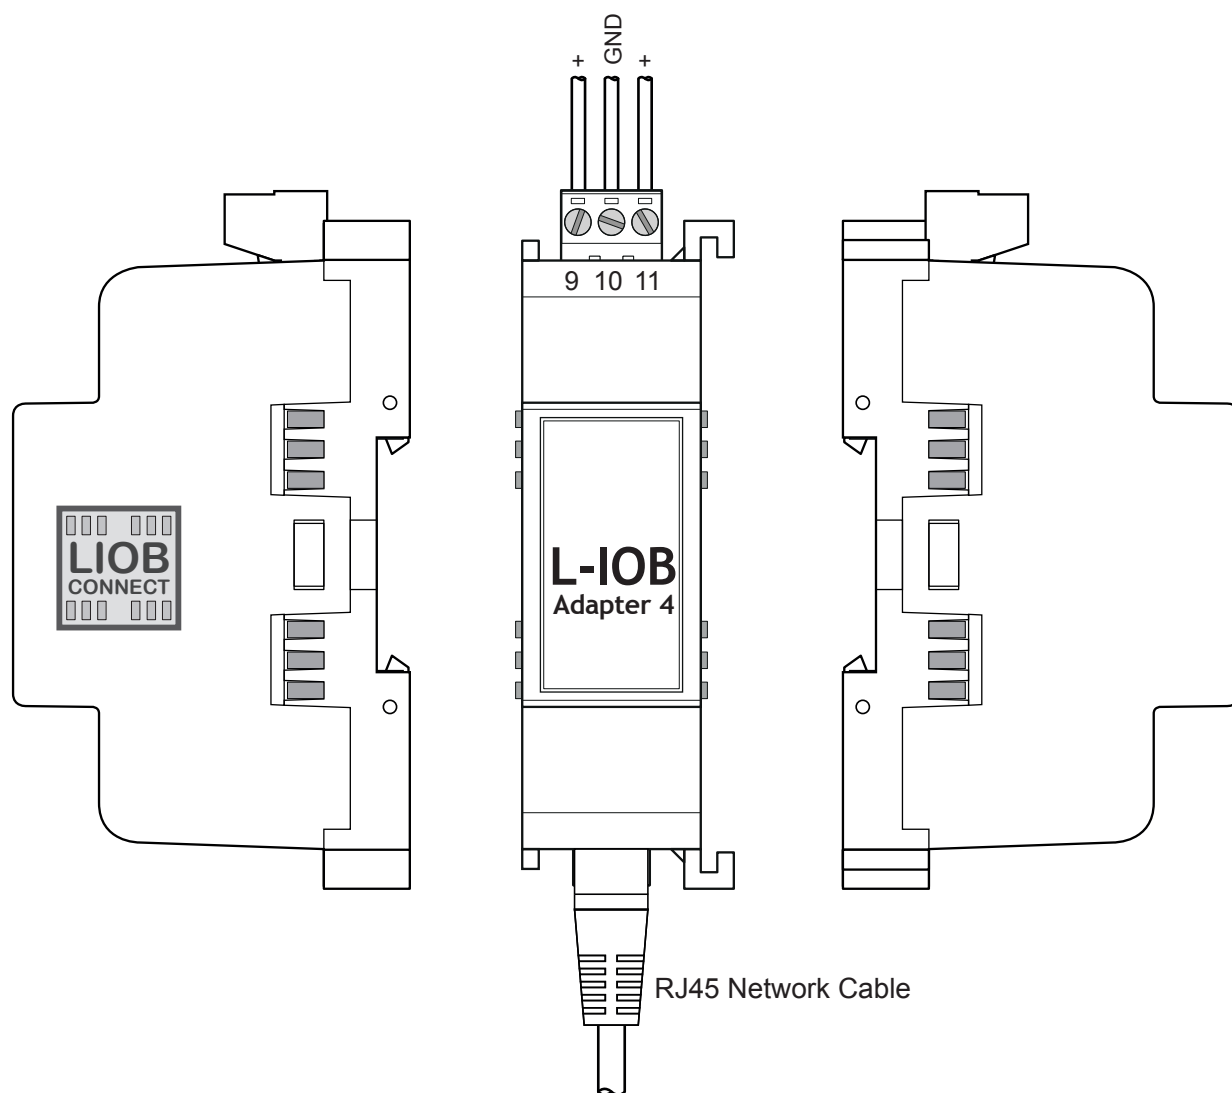

Connectors LIOB-A4		
LIOB CONNECT IN/OUT via RJ45 Network Cable	1	A
	2	B
	3	GND
	4	SEL
	5	GND
	6	GND
	7	Input 24 V PLUS
	8	Input 24 V PLUS
POWER INPUT	9	Input 24 V PLUS
	10	GND
POWER OUTPUT max. 400mA	11	Output 24 V PLUS

Connectors LIOB-A5		
NC	9	not connected
POWER OUTPUT max. 400mA	10	Output GND
	11	Output 24 V PLUS
BUS TERMINATION		

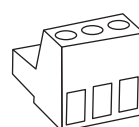


Weidmüller
BLZP 5.08/03/180
0.2 - 2.5 mm²



LIOB-A4/A5 schematics to extend the LIOB-Connect bus

Use standard RJ45 network cables (max. 50 m) to connect 2 LIOB-Connect lines.
On the last segment, the LIOB-Connect bus is terminated with the LIOB-A5.

LIOB-A4

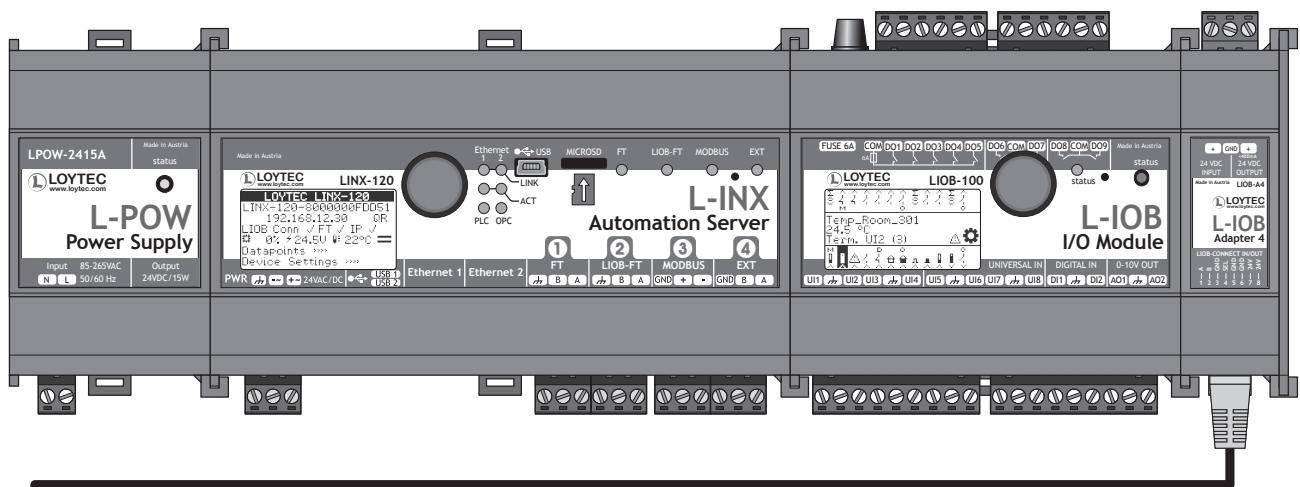


RJ45 Network Cable

≈ max. 50m

LIOB-A4

LIOB-A5

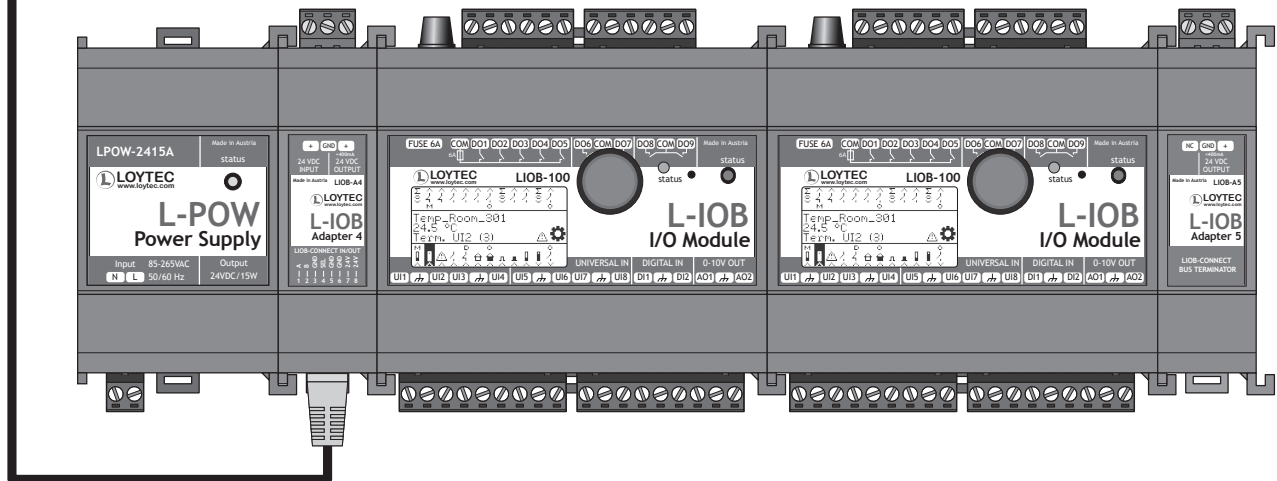

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

