

Sinteso™

Fire terminal

FT2040



Compact, pre-assembled fire terminal with integrated, user-friendly operating unit for system operation and display.

- System operation and display functions
- Ergonomically arranged operating and indication elements grouped according to function
- Large backlit display: 8 lines of 40 characters each
- Convenient context- and state-based operation via soft keys
- One text display with two lines of information for each alarm event
- Ability to store location-specific action texts
- Simultaneous display of multiple events
- Different levels of operation according to access level
- Operating access via a password or optional key switch
- Possible to have several fire terminals per fire detection system
- Extensions: Event printer, power supply, serial interfaces

Features and Functions

System



The diagrams have been simplified and do not include additional network hardware or security components. Permissible applications are described in the A6V101039125 Network Security Guidelines document. Contact your Siemens IT security expert for more information.

System overview

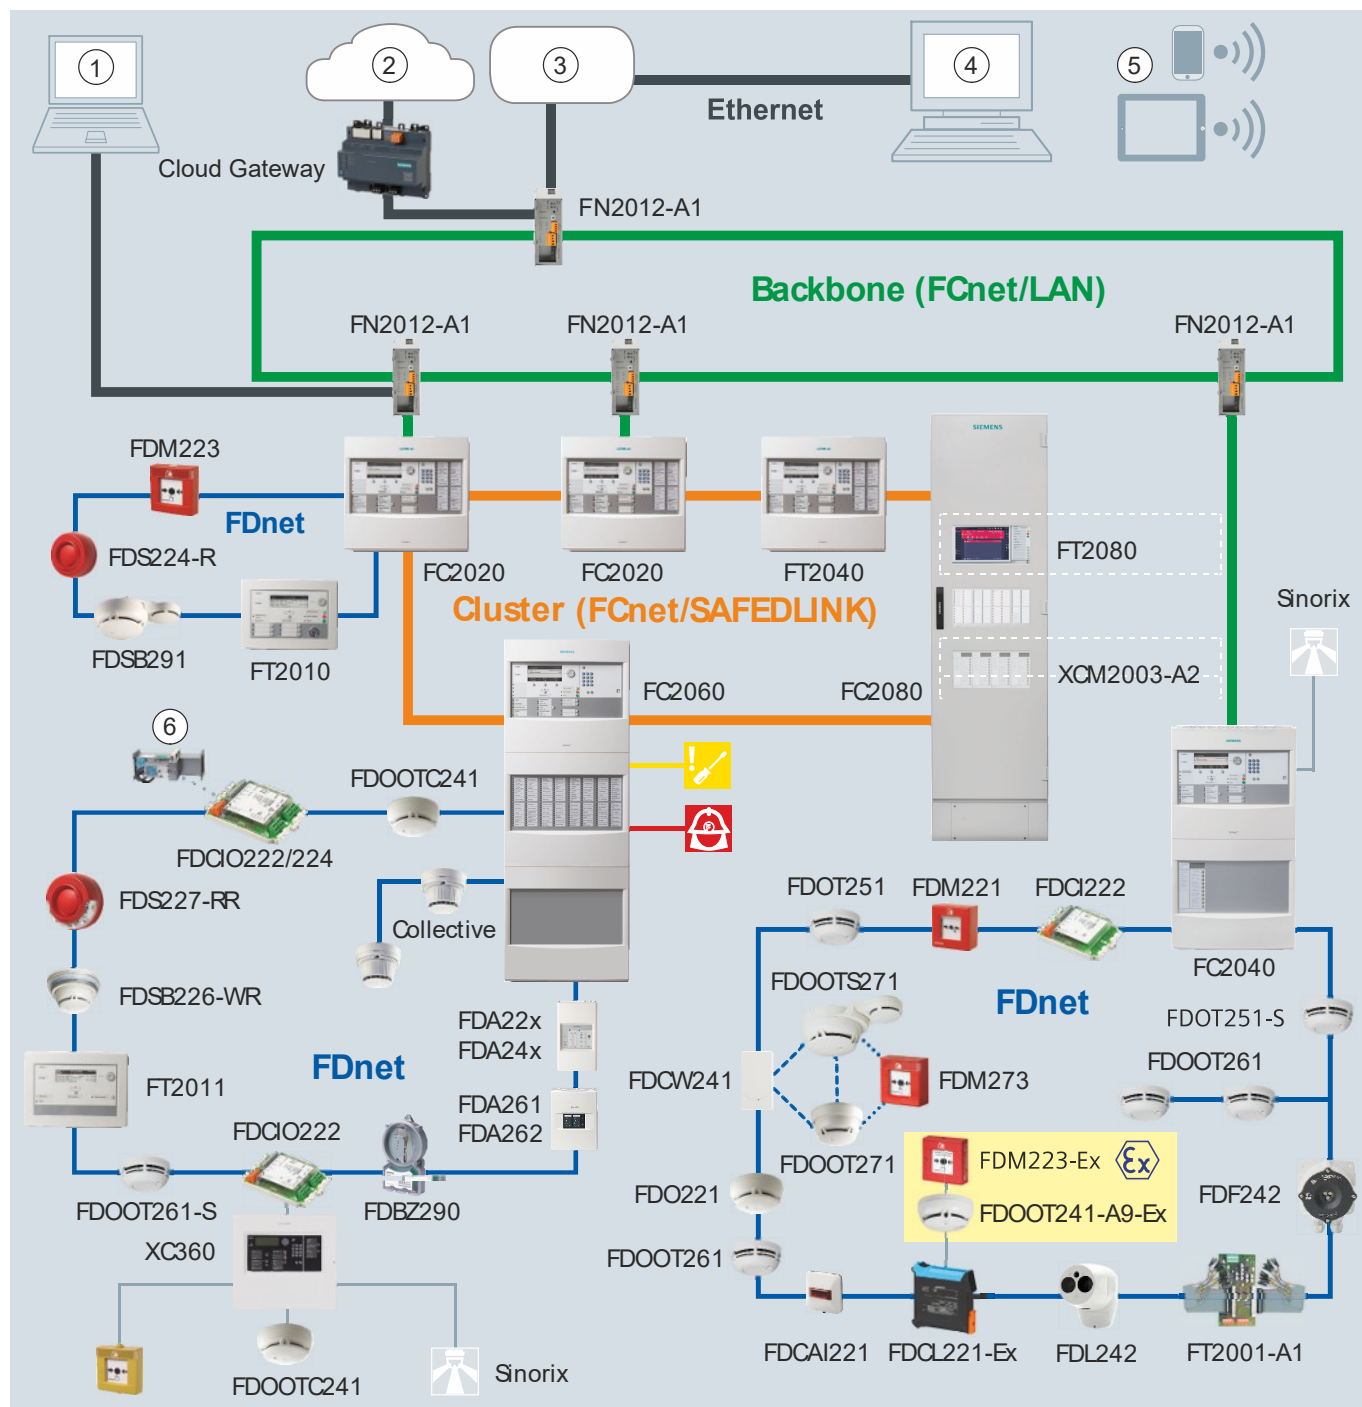


Fig. 1: System overview

1	Remote access with SintesoView
2	'Cloud for Buildings'
3	Customer network
4	Management platform
5	Remote access to management platform
6	Fire damper with actuator
	Transmission of a fault signal
	Transmission of an alarm signal

You will find a detailed labeled version of the diagram above along with further information in the A6V10906627 planning guide, see chapter 'Product documentation'.

Networking of fire control panels



The diagrams have been simplified and do not include additional network hardware or security components. Permissible applications are described in the A6V101039125 Network Security Guidelines document. Contact your Siemens IT security expert for more information.

Up to 32 control panels and terminals can be linked to form one FCnet network. If the FCnet network is connected to a danger management system via BACnet, up to 16 control panels and terminals can be networked.

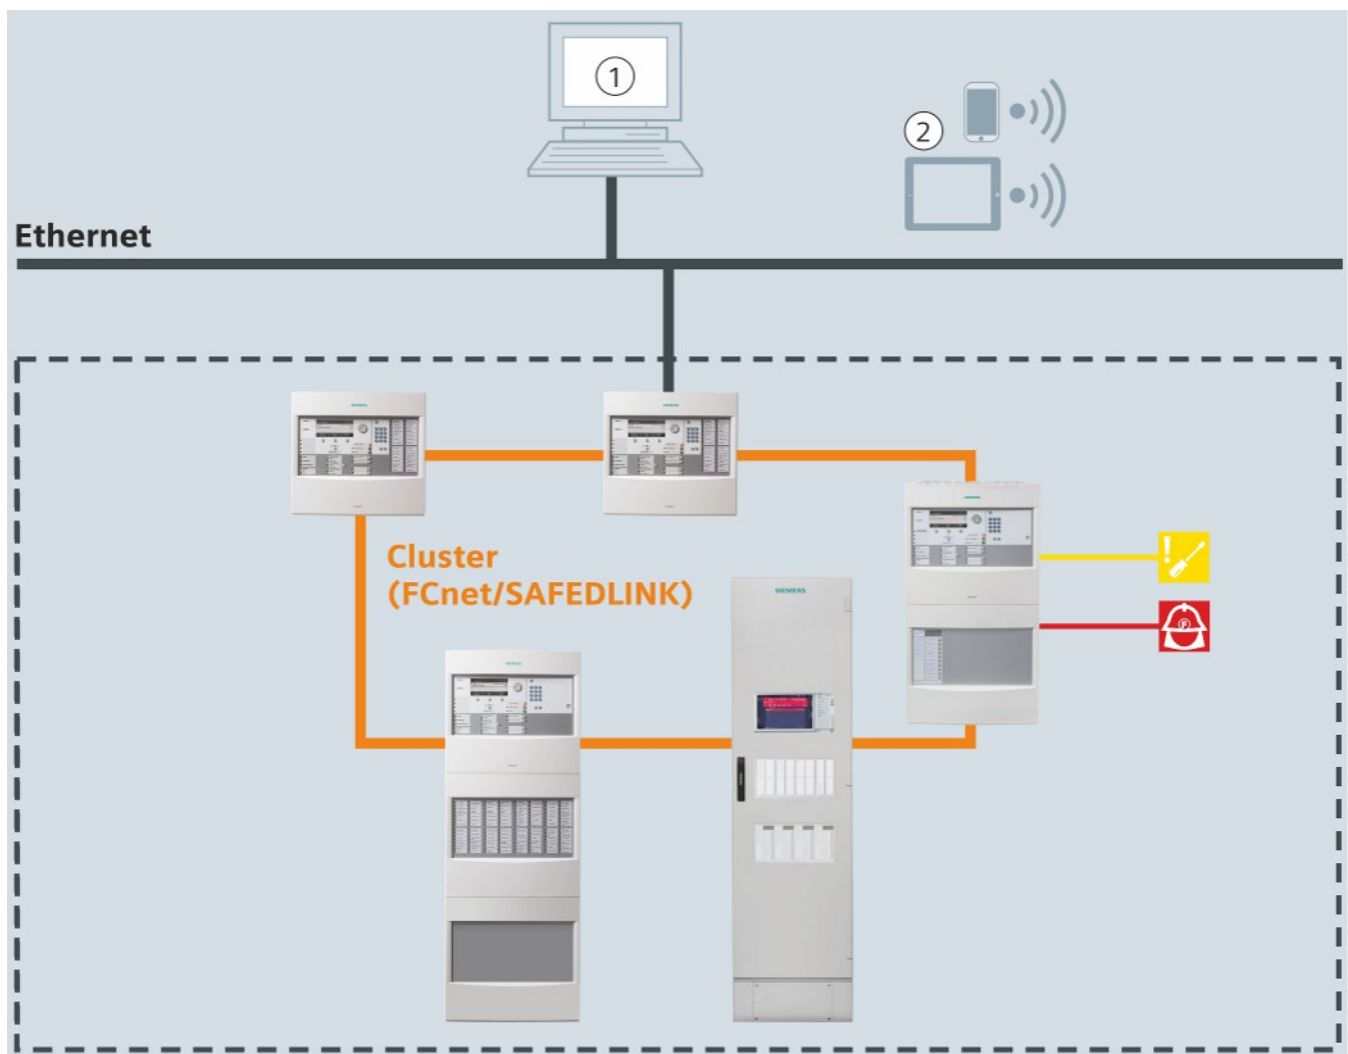


Fig. 2: Sub-net

1	Management platform
2	Remote access to management platform
	Transmission of a fault signal
	Transmission of an alarm signal

An optical FCnet/LAN network (without sub-networks) allows operation of a maximum of 64 stations in a single network.

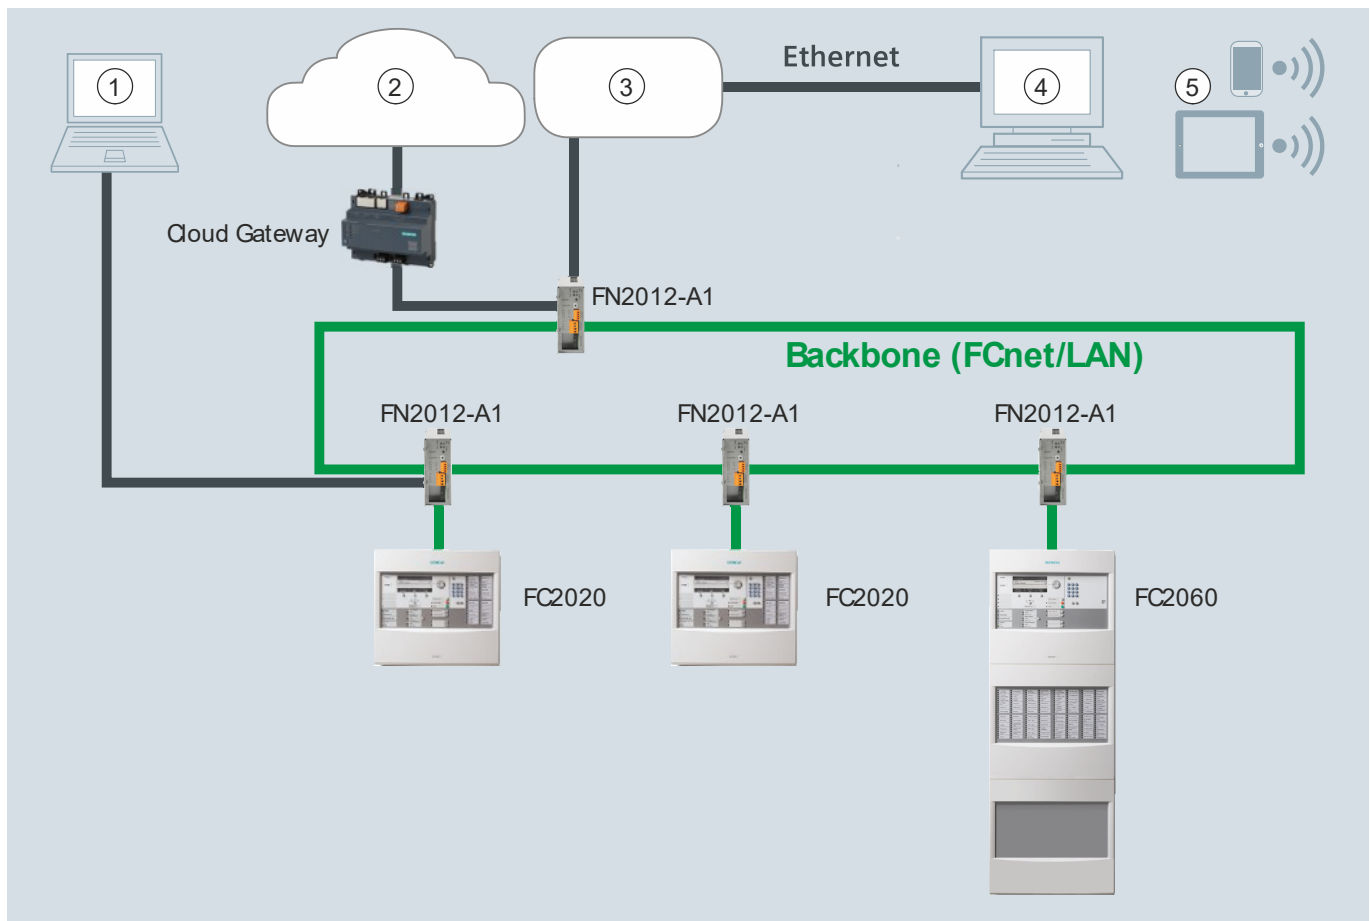


Fig. 3: Networking via 'FCnet/LAN' without a 'subnet'

1	Remote access with SintesoView
2	'Cloud for Buildings'
3	Customer network
4	Management platform
5	Remote access to management platform

You will find a detailed labeled version of the diagram above along with further information in the A6V10906627 planning guide, see chapter 'Product documentation'.

An extended redundant network via 'FCnet/LAN' without a sub-net is a glass fiber Ethernet network without 'SAFEDLINK sub-net'. This type of networking meets the requirements for communication in 'Degraded mode' and is EN-54-compliant.

The following preconditions/restrictions are applicable:

- To ensure EN-54 conformity, the following setting must be activated in the 'SintesoWorks': 'Degraded signal forwarding enabled'.
- The network must be implemented via one connection module (MoNet) FCA2031-A1 and one Ethernet switch (modular) FN2012 per 'Station' in each case.
- A maximum of 64 'Stations' can be networked via the 'FCnet/LAN' without a sub-net.

An optical FCnet/LAN network allows up to 14 sub-nets with up to 16 stations to be operated in one network. A maximum of 64 stations is supported in total.

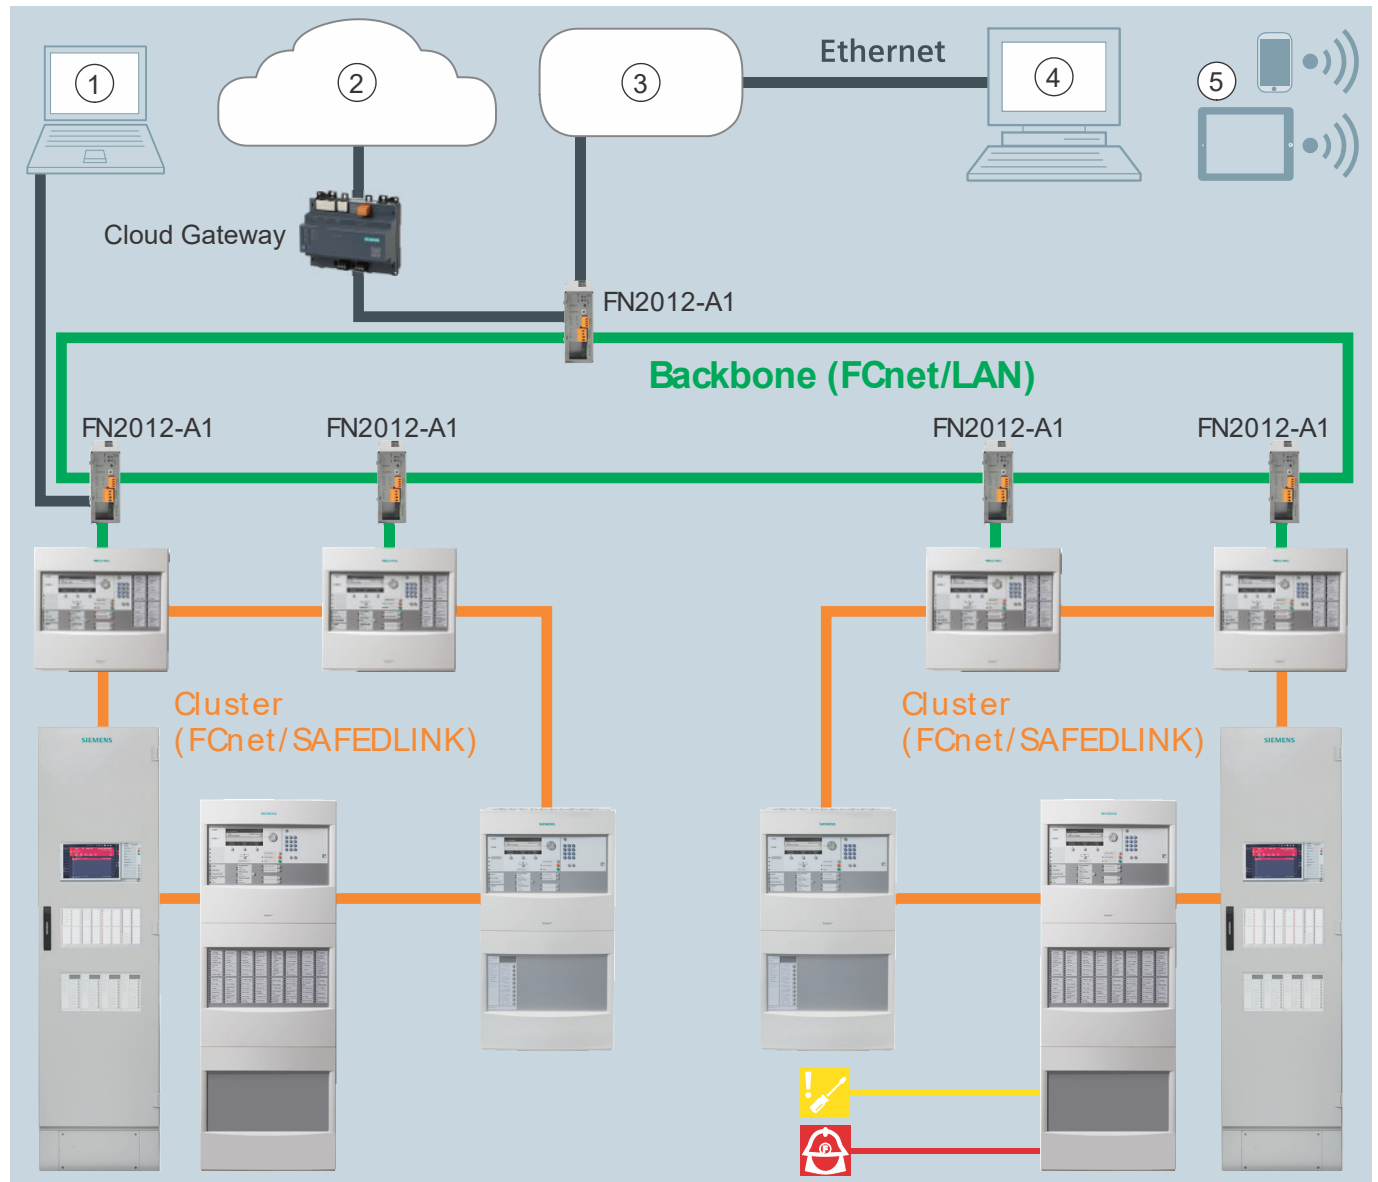


Fig. 4: Backbone

1	Remote access with SintesoView
2	'Cloud for Buildings'
3	Customer network
4	Management platform
5	Remote access to management platform
	Transmission of a fault signal
	Transmission of an alarm signal

You will find a detailed labeled version of the diagram above along with further information in the A6V10906627 planning guide, see chapter 'Product documentation'.

Terminals

General features and functions

- Person Machine Interface that is used remotely from the control panel, which can be optionally provided with its own power supply
- Up to five fire terminals can be configured with system-wide visibility.
- The fire terminal has spaces for installing optional interfaces such as an RS232 or RS485, network modules (SAFEDLINK), and a key switch.
- Each fire terminal has an Ethernet connection.
- The powerful FCnet can be used to network up to 64 fire control panels FC20xx and fire terminals with one another in any way.
- Interface to Siemens danger management system

Terminal-specific features

FT2040-AZ	Housing (Eco)
	FDnet detector line: • None Features: • Operating unit Station options: • 70 W power supply • 2 batteries, each 7 Ah Operating unit options: • Event printer FTO2001-A1 • Key switch (Kaba) FTO2005-C1 • Key switch (nordic) FTO2006-B1

Extensions

FCM2036-A2	Operating add-on (4xLED indicator)
	• Optional operating add-ons with 96 indicator groups and two LEDs each: 1x red/green LED and 1x yellow LED
FCM2038-A2	Operating add-on (2xLED indicator)
	• Optional operating add-ons with 48 indicator groups and two LEDs each: 1x red/green LED and 1x yellow LED
FH2001-A1	Housing (Eco)
	• Empty housing for free use • 443 x 404 x 108 mm • E.g., for extra batteries, operating add-ons, or event printers • Space for the following battery configuration: – 2x FA2003-A1 (7 Ah)

FH2006-A1	Housing (Eco + plan compartment)
	• Empty housing for A4 documents • 443 x 404 x 108 mm • Plan compartment depth 50 mm
FTO2001-A1	Event printer
	• Thermal printer for installation in operating units or operating add-ons • Can be controlled via the RS232 module FCA2001-A1 (order separately) • Logs all important events, such as alarms, faults, isolations, and test functions

Design

Function elements

Operating unit

The following elements are available on the operating unit:

- CPU module and electronics
- Ethernet connection
- Slots for RS232 and RS485 modules and network modules (SAFEDLINK)
- Space for 'Kaba' or 'nordic' key switch
- Space for event printer (depending on version)

Fire terminal board

Connection terminals for the following elements are available on the fire terminal board:

- Optional power supply
- 24 V supply from a control panel
- External 24 V power source

Housing

The housing contains sufficient space for an optional 70 W power supply and 2x batteries with a capacity of 7 Ah.

Operation

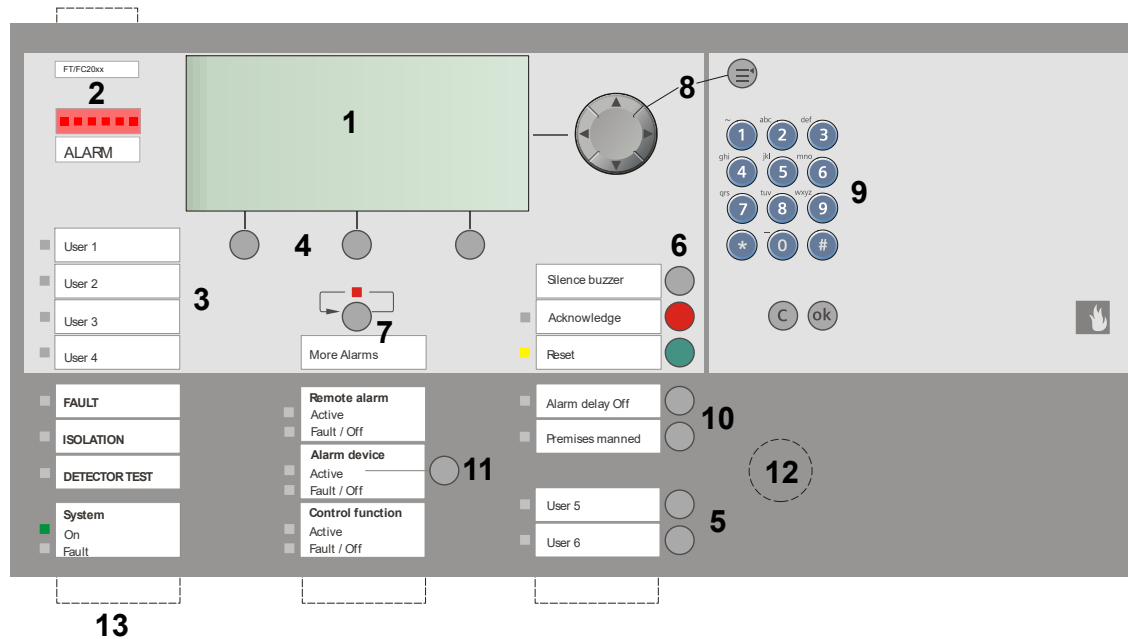


Fig. 5: Indication and operating elements

Position	Comment
1	Backlit 8-line LC display with 40 characters per line and detailed text information about all events that occur: • Event type, event location, action texts, operating states • Instructions displayed directly in alarm situations to tell you what to do • Convenient operation via soft keys and navigation button
2	Alarm indicator, lights up red when an alarm event occurs
3	Four configurable LEDs and associated inscription fields
4	Soft keys for direct operation depending on state
5	Two buttons with LEDs, individually configurable
6	Buttons for 'Buzzer off', 'Acknowledge' message, and 'Reset' message
7	Button for scrolling through alarm messages
8	Navigation and menu buttons
9	Keypad for entering numeric and alphanumeric texts, e.g., password or customer text
10	Alarm organization buttons
11	Button and LEDs with inscription fields for alarming equipment
12	Optional key switch for operating access (Kaba or nordic)
13	Insertable inscription strips

Setup

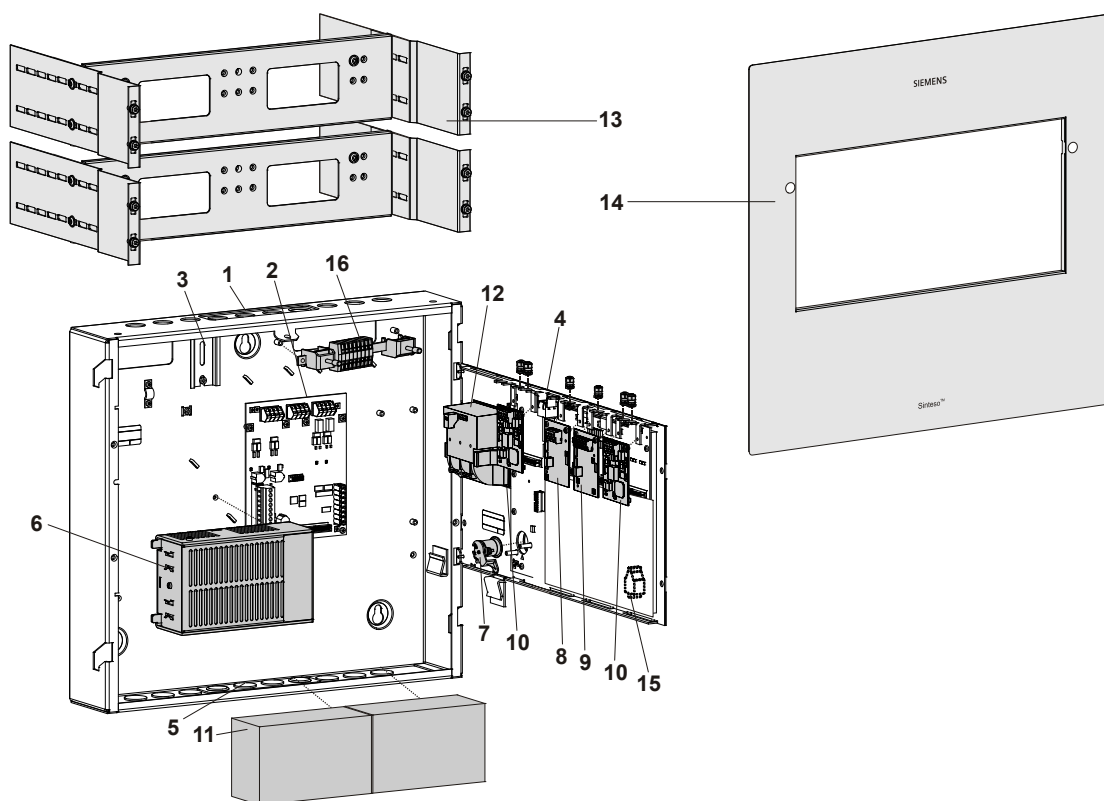


Fig. 6: Layout of FT2040

Position	Designation	Type	Comment
Basic equipment			
1	Housing (Eco)	FHA2001-A1	Items 1-5: Basic equipment
2	Fire terminal board	FTI2001-A1	
3	U-rail TS35	-	
4	Operating unit	FCM20xx-xx	Operating unit with CPU
5	Space for batteries	-	Max. 2x 12 V/7 Ah, optional, with power supply (70 W)
Extensions			
6	Power supply (70 W)	FP2015-A1	If fire terminal is not supplied with power by the control panel
7	Key switch (Kaba)	FTO2005-C1	For operating access authorization
	Key switch (nordic)	FTO2006-B1	
8	RS485 module (isolated)	FCA2002-A1	For peripheral devices with RS485 interface
9	RS232 module (isolated)	FCA2001-A1	For devices with an RS232 interface
10	Network module (SAFEDLINK)	FN2001-A1	For networking several stations
11	Battery (12 V, 7 Ah, VdS)	FA2003-A1	For the emergency power supply
12	Event printer	FTO2001-A1	For logging events
13	19" mounting kit	FHA2016-A1	For installation in 19" third-party housing
14	FM blind 1HE	FHA2017-A1	For recessed mounting of housings
15	License key Sx	FCA20xx	For special functions
16	Cable kit (communication)	FCA2014-A1	For flexible connections running to the modules on the operating unit

Type Overview

	Housing (Eco)
	 The image shows a Siemens Sinteso FT2040-AZ fire alarm control panel. It features a large LCD screen at the top displaying '001 Information', 'Area 1', 'Welcome to Siemens', and 'Unmanned operation 90%'. Below the screen are three buttons labeled 'Execute Command', 'Jump to Begin', and 'Jump to End'. To the right of these buttons is a circular dial and a numeric keypad (0-9). Further right are buttons for 'Silence buzzer', 'Acknowledge', and 'Reset'. Below the screen, there are several status indicators and buttons: 'More alarms', 'Remote alarm' (Active, Fault / Off, Alarm device, Active, Fault / Off, Control function, Active, Fault / Off), 'Alarm delay off', and 'Premises manned'. On the left side, there are buttons for 'FAULT', 'ISOLATION', 'DETECTOR TEST', 'System On', and 'Fault'. The Siemens logo is visible at the top, and 'Sinteso™' is visible at the bottom of the panel.
Type	FT2040-AZ
Order number	A5Q00016702
Power supply	Without (70 W optional)
Max. battery capacity	7 Ah

Details for ordering

Fire terminals

Type	Designation	Weight	Order number
FT2040-AZ	Fire terminal	5.767 kg	A5Q00016702

Extensions

Type	Designation	Weight	Order number
FCA2001-A1	RS232 module (isolated)	0.033 kg	A5Q00005327
FCA2002-A1	RS485 module (isolated)	0.027 kg	A5Q00009923
FCA2014-A1	Cable kit (communication)	0.126 kg	A5Q00023027
FCM2036-A2	Operating add-on (4xLED indicator)	3.905 kg	S54400-B147-A1
FCM2038-A2	Operating add-on (2xLED indicator)	2.516 kg	S54400-B146-A1
FH2001-A1	Housing (Eco)	5.268 kg	A5Q00016865
FH2006-A1	Housing (Eco + plan compartment)	7.530 kg	A5Q00022364
FHA2016-A1	19" mounting kit	3.000 kg	A5Q00020179
FHA2017-A1	FM blind 1HE	3.020 kg	A5Q00024719
FN2001-A1	Network module (SAFEDLINK)	0.022 kg	A5Q00012851
FN2006-A1	Fiber network module (SM)	0.792 kg	S54400-A109-A1
FN2007-A1	Fiber network module (MM)	0.792 kg	S54400-A110-A1
FP2015-A1	Power supply (70 W) for EN-compliant installation in empty housing	1.300 kg	S54400-B121-A1
FTO2001-A1	Event printer	0.141 kg	A5Q00010126
-	Spare printer reels (10 reels)	0.090 kg	A5Q00017619
FTO2005-C1	Key switch (Kaba)	0.083 kg	A5Q00010113
FTO2006-B1	Key switch (nordic)	0.046 kg	A5Q00010129

Network (backbone)

Type	Designation	Weight	Order number
FCA2031-A1	Connection module (MoNet)	0.081 kg incl. cable	S54400-A153-A1
FHA2029-A1	Mounting kit (switch)	1.261 kg	S54400-B79-A1
FN2012-A1	Ethernet switch (modular)	0.600 kg	S54400-B152-A1
VN2002-A1	Ethernet module (MM)	0.026 kg	S54400-A43-A1
VN2003-A1	Ethernet module (SM)	0.026 kg	S54400-A44-A1

Battery

Type	Designation	Weight	Order number
FA2003-A1	Battery (12 V, 7 Ah, VdS)	2.350 kg	A5Q00019353
FHA2061-A1	Mounting kit for batteries	–	S54400-B91-A1

License keys

Type	Designation	Weight	Order number
FCA2033-A1	License key (S1)	0.010 kg	S54400-P154-A1
FCA2034-A1	License key (S2)	0.010 kg	S54400-P155-A1
FCA2035-A1	License key (S3)	0.010 kg	S54400-P156-A1
FCA2036-A1	License key (S4)	0.010 kg	S54400-P157-A1

Product documentation

Title	Document ID
System documentation	
System description	008836
Product data	008837
Planning	008843
Mounting/Installation	008851
System data sheet	
FS20 – Fire detection system	008955
Data sheets	
FC2020 - fire control panel	009383
FC2030 - fire control panel for modernization	A6V10087532
FC2040 - fire control panel	009384
FC2060 - fire control panel (modular)	A6V10087844
FC2080 - fire control panel (19", modular)	A6V10275515
FT2040 - fire terminal	009386
FT2080 - fire terminal (Touch)	A6V10378271
Fire detection system with integrated single or multi-sector extinguishing	A6V10880701
Network Security Guidelines	A6V101039125
Planning overview	A6V10906627

Related documents such as the environmental declarations, declarations of conformity, etc., can be downloaded from the following Internet address:

www.siemens.com/bt/download



Guarantee

Technical data on specific applications are only valid together with Siemens products listed under "Equipment combinations". Siemens rejects any and all warranties in the event that third-party products are used.

Technical data

Fire terminal FT2040		
Supply	Power supply (optional)	70 W
	Operating voltage	DC 20...30 V
	Current consumption at 24 V:	
	• Quiescent current (LCD illumination inactive)	125 mA
	• Alarm current (LCD illumination active)	130 mA
	Max. battery capacity (optional)	2x 12 V, 7 Ah
Inputs / outputs	Supply outputs	2x Vsys
Interfaces	Operating unit	Integrated
	Slots for serial interfaces RS232, RS485	2
	Slots for network modules	2
	Ethernet port RJ45	1
Ambient conditions	Operating temperature	-8...+42 °C
	Storage temperature	-20...+60 °C
	Air humidity (no condensation permitted)	≤95% rel.
	Maximum height above sea level	4000 m
Mechanical data	Dimensions:	
	• Without cover cap	430 x 398 x 85 mm
	• With cover cap	443 x 404 x 108 mm
	Protection category (IEC 60529)	IP30
	Color:	
	• Housing	~RAL 7035
	• Cover cap	~RAL 9010
	• Foil	~RAL 9006, ~RAL 9010
	• Buttons	~RAL 7035, light gray; ~RAL 5014, pigeon blue
Approvals	VdS	G206111
	LPCB	126bn/R01
	FM	3048514

Issued by
Siemens Switzerland Ltd
Smart Infrastructure
Global Headquarters
Theilerstrasse 1a
CH-6300 Zug
+41 58 724 2424
www.siemens.com/buildingtechnologies

© Siemens 2007
Technical specifications and availability subject to change without notice.

Document ID	009386_w_en_--
Edition	2026-03-17