


RDF10

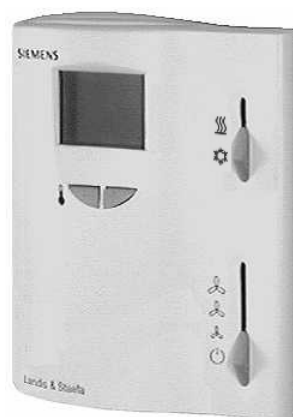

RDF10.2

Room Temperature Controllers with LCD

RDF10...

for 2-pipe fan coil units

for compressors in DX type equipment (RDF10 only)

-
- Output for an on / off valve actuator
 - Output for a 1-stage compressor (RDF10)
 - Outputs for a 3-speed fan
 - Control depending on the room or the return air temperature (RDF10)
 - Automatic heating / cooling changeover (RDF10)
 - Manual heating / cooling changeover (RDF10.2)
 - Operating modes: Normal, Economy and Standby (RDF10)
 - Operating modes: Normal and OFF (RDF10.2)
 - Operating mode changeover input for remote control (RDF10)
 - Function for avoiding damage resulting from moisture (RDF10)
 - Selectable installation and control parameters (RDF10)
 - Display of room temperature or setpoint selectable (RDF10)
 - Minimum and maximum setpoint limitation (RDF10)
 - Operating voltage AC 230 V

Typical use:

- For control of the room temperature in individual rooms that are heated or cooled with 2-pipe fan coil units
- For the control of rooms that are cooled with DX type equipment
- For opening or closing a valve and for switching a 3-speed fan

Suitable for use in systems with

- automatic heating / cooling changeover
- manual heating / cooling changeover
- continuous heating or cooling mode

Functions

The controller acquires the room temperature via its integrated sensor or external room temperature sensor (QAA32) or, if used, via an external return air temperature sensor (QAH11.1, optional with the RDF10) and maintains the setpoint by delivering 2-position valve control or compressor output commands.

The switching differential is 2 K in heating mode and 1 K in cooling mode (adjustable).

Fan operation

The fan is switched to the selected speed via control output Q1, Q2 or Q3.

When function "Temperature-dependent fan control" is activated (can be selected with DIP switch no.1), the fan is switched on / off depending on the temperature, that is, together with the valve or compressor.

It is switched off when

- leaving the heating or cooling sequence, provided function "Temperature-dependent fan control" is activated, or
- manually changing to Standby "U" provided no setpoints (e.g. for frost protection) are set and active (RDF10/RDF10.2)
- activating an external operating mode changeover switch, provided plant conditions do not call for Economy mode (RDF10)
- turning off the controller's power supply

Display

If DIP switch no. 2 is set to ON (factory setting), the controller displays the acquired room or return air temperature (unless parameter or setpoints are temporarily changed). If the DIP switch is set to OFF, the controller displays the normal operating mode setpoint. In this case, the value of the current temperature reading can only be visualized temporarily by selecting parameter P14.

Water-based fan coil application

Use in conjunction with 1 valve, either for heating / cooling with changeover, heating only or cooling only operation.

ON

The valve receives the **OPEN** command via control output Y11 when

1. the acquired room temperature lies by half the switching differential below the setpoint (heating mode) or above the setpoint (cooling mode), and
2. the valve has been fully closed for more than 1 minute (parameter P20 with RDF10 only).

OFF


The valve receives the **CLOSE** command via control output Y11 when

1. the acquired room temperature lies by half the switching differential above the setpoint (heating mode) or below the setpoint (cooling mode), and
2. the valve has been fully open for more than 1 minute (parameter P19 with RDF10 only).

Note: Control output Y12 delivers a control command which is inverted to the control command at output Y11 and which can be used for normally open valves.

**Automatic
changeover**

With the RDF10, the water temperature acquired by the changeover sensor (QAH11.1 + ARG86.3) is used by the controller to switch from heating to cooling mode, or vice versa. When the water temperature lies above 28 °C (parameter P08), the controller switches to heating mode, below 16 °C (parameter P07) it switches to cooling mode. If, immediately after switching on, the water temperature lies between the 2 changeover points, the controller will start in heating mode. The water temperature is acquired at 30-second intervals and the operating state is updated.

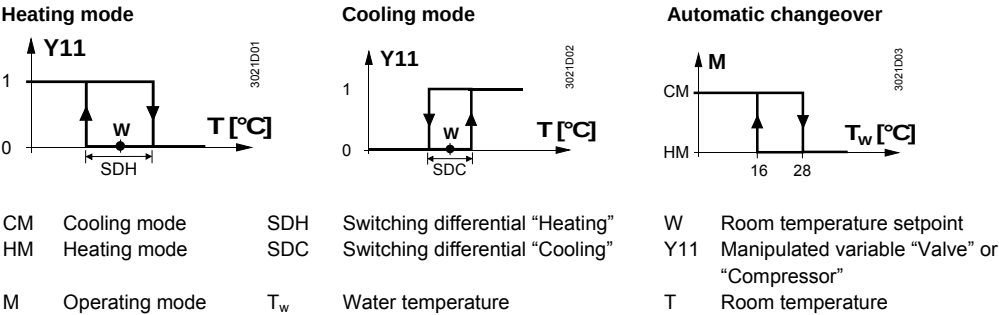

**Purging function
(optional)**

The task of the changeover sensor is to initiate the change from heating to cooling mode, based on the acquired water temperature. If a 2-port valve is used, it is highly recommended to activate the purging function (parameter P16). This function ensures the correct acquisition of the medium temperature even if the 2-port valve is closed for a longer period of time. To achieve this, the valve is opened for 1 to 5 minutes (parameter P16) at 2-hour intervals during off hours.

When the purging function is activated, the first purging action is performed after changing parameter P16 and quitting the parameter setting mode.

If the RDF10 is intended to be used for compressor based applications the purging function (parameter P16) has to remain disabled.

**Compressor-based
application
(RDF10 only)**
ON

The compressor receives the **ON** command via control output Y11 when

1. the acquired room temperature lies by half the switching differential below the set point (heating mode) or above the setpoint (cooling mode), and
2. the compressor has been **OFF** for more than 1 minute (parameter P20).

OFF

The compressor receives the **OFF** command via control output Y11 when

1. the acquired room temperature lies by half the switching differential above the set point (heating mode) or below the setpoint (cooling mode), and
2. the compressor has been **ON** for more than 1 minute (parameter P19).

**Return air temperature
(optional)**

The RDF10 provides control either depending on the acquired room temperature or depending on the fan coil unit's return air temperature. Changeover is automatic if a QAH11.1 cable temperature sensor is connected.

Operating modes


The following operating modes are available:

Normal mode

Heating or cooling mode with manually selected fan speed III, II or I. In Normal mode, the controller maintains the adjusted setpoint.

Economy mode	With the RDF10, a potential-free operating mode changeover switch can be connected to status input D1-GND. When the switch closes (due to an open window, for instance), the operating mode will change from Normal to Economy. In this operating mode, the relevant setpoint of heating or cooling is maintained (parameters P01 and P02). With the RDF10, the operating action of the switch (NC or NO) can be selected.
Standby	With the RDF10 or RDF10.2, the relevant setpoints of heating and cooling are maintained when in Standby “U”, provided such setpoints have been adjusted (parameters P03 and P04).
Avoiding damage due to moisture (only with the RDF10)	To avoid damage due to moisture in very warm and humid climatic zones resulting from lack of air circulation in Economy mode (e.g. in hotel rooms during unoccupied periods), the fan can be kept running in Economy mode when activating parameter P17. In this case, the fan keeps running at the selected speed or at speed 1 if the operating mode selector is in Standby “U”.

Setting the control parameters

	With the RDF10 and RDF10.2, a number of control parameters can be set to optimize the control performance. These parameters can also be set during operation without opening the unit. In the event of a power failure, all control parameters set will be maintained.
Settings	The parameters can be changed as follows: 1. Set the operating mode selector to Standby “U”. 2. Press buttons + and – simultaneously for 3 seconds. Release them and, within 2 seconds, press button + again for 3 seconds. Then, the display will show “P01”. 3. Select the required parameter by repeatedly pressing buttons + and –:  4. By pressing buttons + and – simultaneously, the current value of the selected parameter appears, which can be changed by repeatedly pressing buttons + or –. 5. By pressing buttons + and – simultaneously again or 5 seconds after the last press of a button, the last parameter will be displayed again. 6. If you wish to display and change additional parameters, repeat steps 3 through 5. 7. 10 seconds after the last display or setting, all changes will be stored and the controller returns to normal operation.

Note:	For RDF10.2 only parameters P03, P04, P05, P06, P09, P10, P11 and P14 are available
--------------	---

Control parameters of the RDF10 and RDF10.2

Parameter	Meaning	Setting range	Factory setting
P01	Setpoint of heating in Economy mode (operating mode changeover contact activated)	OFF, 5...20 °C (in increments of 0.5 K)	16 °C ¹⁾
P02	Setpoint of cooling in Economy mode (operating mode changeover contact activated)	OFF, 21...35 °C (in increments of 0.5 K)	28 °C ¹⁾
P03	Setpoint of heating in Standby "U"	OFF, 5...20 °C (in increments of 0.5 K)	8 °C
P04	Setpoint of cooling in Standby "U"	OFF, 21...35 °C (in increments of 0.5 K)	OFF
P05	Minimum setpoint limitation in Normal mode	5...20 °C (in increments of 0.5 K)	5 °C
P06	Maximum setpoint limitation in Normal mode	21...35 °C (in increments of 0.5 K)	35 °C
P07	Heating/cooling changeover switching point cooling	10...25 °C (in increments of 0.5 K)	16 °C ¹⁾
P08	Heating/cooling changeover switching point heating	27...40 °C (in increments of 0.5 K)	28 °C ¹⁾
P09	Sensor calibration	-3...+3 K (in increments of 0.5 K)	0 K
P10	P-band in heating mode or switching differential heating	0.5...+4 K (in increments of 0.5 K)	2 K
P11	P-band in cooling mode or switching differential cooling	0.5...+4 K (in increments of 0.5 K)	1 K
P13	Active temperature sensor (no setting, display only)	1: Room temperature sensor active 2: Return air temperature sensor active	- ¹⁾
P14	Value of current room temperature reading (no setting, display only)	0...49 °C = current temperature value	-
P15	Value of current heating / cooling changeover temperature reading including indication of current mode (⚙️, 🌬️) (no setting, display only)	100 = input open (no sensor connected, heating mode 🌬️) 0...49 °C = current temperature value 00 = input bridged, cooling mode (⚙️)	- ¹⁾
P16	Purging function	0 min.: Not active 1...5 min.: Active with selected duration	0 min. ¹⁾
P17	Fan control in Economy mode	OFF: Fan is off in the dead zone ON: Fan is on in the dead zone, running at the selected speed or at speed 1 if in Standby "U"	OFF ¹⁾
P19	Minimum output on time (Y11, Y21)	1...20 minutes (in increments of 1 min.)	1 min. ¹⁾
P20	Minimum output off time (Y11, Y21)	1...20 minutes (in increments of 1 min.)	1 min. ¹⁾

1) Not available with RDF10.2

Type summary

Type reference	Features
RDF10	With input for return air temperature sensor With input for operating mode changeover contact With automatic heating / cooling changeover
RDF10.2	Without input for return air temperature sensor Without input for operating mode changeover contact With manual heating / cooling changeover

Ordering

When ordering, please give name and type reference.

The QAH11.1 temperature sensor (can be used as a return air temperature or changeover sensor), the changeover sensor mounting kit and the valves are to be ordered as separate items.

Equipment combinations

Type of unit	Type reference	Data Sheet
Cable temperature sensor	QAH11.1	1840
Room sensor	QAA32	1747
Changeover mounting kit	ARG86.3	1840
Electromotoric on/off actuator	SFA21...	4863
Thermal actuator (for radiator valve)	STA21...	4893
Thermal actuator (for small valves 2.5 mm)	STP21...	4878

Mechanical design


The controller consists of 2 parts:

- Plastic housing which accommodates the electronics, the operating elements and the built-in room temperature sensor
- Base

The housing engages in the base and is secured with 2 screws.

The base carries the screw terminals. The DIP switches are located at the rear of the housing.

Setting and operating elements

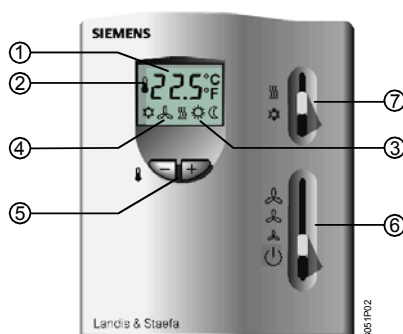

Legend

- 1 Display of the room temperature, setpoints or control parameters
- 2 Symbol used when displaying the current room temperature
- 3 Normal mode
 Economy mode
- 4 Cooling valve open
 Fan on
 Heating valve open
- 5 Buttons for adjusting the setpoints and the control parameters
- 6 Operating mode selector
(Standby “U”, heating or cooling mode with manual selection of fan speed)
- 7 Operating mode selector RDF10.2 (heating or cooling mode)

Set of DIP switches

DIP switch no.	Meaning	Position ON (factory setting)	Position OFF
1	Fan control	Fan control is temperature-independent in Normal mode	Fan control is temperature-dependent in Normal mode
2	Display of temperature or setpoint	Room (or return air) temperature display	Setpoint display
3 ¹⁾	Operating action of switch for external operating mode changeover	Changeover activated when switch is closed (NO)	Changeover activated when switch is open (NC)

Accessories

Description	Type reference
Adapter plate 120 x 120 mm for 4" x 4" conduit boxes	ARG70
Adapter plate 96 x 120 mm for 2" x 4" conduit boxes	ARG70.1
Adapter plate for surface wiring 112 x 130 mm	ARG70.2


Engineering notes

With the RDF10, the controller input for automatic heating / cooling changeover can also be used without the QAH11.1 cable temperature sensor:

- In systems without automatic changeover, the temperature sensor can be replaced by an external switch (suited for mains voltage) for manual changeover
- In systems with continuous heating mode, no sensor is connected to the controller's input
- In systems with continuous cooling mode, the controller input (B2-M) must be bridged

Mounting, installation and commissioning notes

Mounting location: On a wall or inside the fan coil unit. Not in niches or bookshelves, not behind curtains, above or near heat sources and not exposed to direct solar radiation. Mounting height is about 1.5 m above the floor. The connecting wires can be run to the controller from a recessed conduit box.

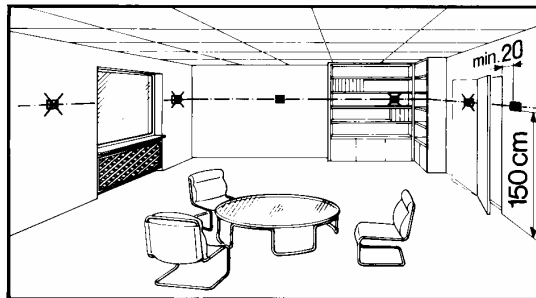

Check the positions of the DIP switches and change them, if required.

After applying power, the controller makes a reset during which all LCD segments flash, indicating that the reset has been correctly made. This takes about 3 seconds. Then, the controller is ready to operate.

- Prior to fitting the changeover sensor, thermal conductive paste must be applied to the location on the pipe where the sensor is placed
- The cables used must satisfy the insulation requirements with regard to mains potential
- Sensor inputs B1-M and B2-M carry mains potential. If the sensor's cables are extended, they must be suited for mains voltage.

The controller is supplied with Mounting Instructions.

Calibrating the sensor

If the room temperature displayed by the controller is inconsistent with the room temperature effectively measured, the temperature sensor of the RDF10 can be recalibrated. In that case, parameter P09 must be changed.



Technical data

 Power supply	Operating voltage	AC 230 V + 10/-15 %
	Frequency	50/60 Hz
	Power consumption	max. 6 VA
	Control outputs Q1, Q2, Q3-N	AC 230 V
	Rating	max. 6(4)A
	Control output Y11-N (NO)	AC 230 V
	Rating	max. 5(3)A
	Control output Y12-N (NC)	AC 230 V
	Rating	max. 5(3)A
	Return air temperature sensor – status input B1-M	QAH11.1, safety class II NTC resistor 3 kΩ at 25 °C
	Changeover – status input B2-M	QAH11.1, safety class II NTC resistor 3 kΩ at 25 °C
	Status input D1 and GND	
	Contact sensing	SELV DC 6...15 V / 3...6 mA
	Insulation against mains	4 kV, reinforced insulation
	Operating action	
Operational data	With the RDF10	selectable (NO / NC)
	Perm. cable length with copper cable 1.5 mm ² for connection to terminals B1, B2 and D1	80 m
	Setpoint setting range	5...35 °C
	Control deviation at 25 °C	max. ±0.5 K
	Switching differential in heating mode, adjustable with the RDF10, fixed with the RDF10.2	2 K
	Switching differential in cooling mode, adjustable with the 1 K RDF10, fixed with the RDF10.2	
	Setpoint «Economy mode ☺», heating, adjustable with the RDF10, fixed with the RDF10.2	16 °C
	Setpoint «Economy mode ☺», cooling, adjustable with the RDF10, fixed with the RDF10.2	28 °C
	Setpoint «Standby ☹», heating	
	With the RDF10 adjustable	8 °C
Environmental conditions	With the RDF10.2, fix	OFF
	Setpoint «Standby ☹», cooling, adjustable with the RDF10, fixed with the RDF10.2	OFF
	Operation	to IEC 721-3-3
	Climatic conditions	class 3K5
	Temperature	0...+50 °C
	Humidity	<95 % r.h.
	Transport	to IEC 721-3-2
	Climatic conditions	class 2K3
	Temperature	–25...+70 °C
	Humidity	<95 % r.h.
Norms and standards	Mechanical conditions	class 2M2
	Storage	to IEC 721-3-1
	Climatic conditions	class 1K3
	Temperature	–25...+70 °C
	Humidity	<95 % r.h.
	 conformity to	
	EMC directive	89/336/EEC
	Low voltage directive	73/23/EEC
	 N474 C-Tick conformity to	
	EMC emission standard	AS/NSZ 4251.1:1994

Product standards

Automatic electrical controls for household and similar use	EN 60 730 – 1
Special requirements on temperature-dependent controls	EN 60 730 – 2 - 9

Electromagnetic compatibility

Emissions	EN 50 081-1
Immunity	EN 50 082-1

Devices of safety class

II to EN 60 730

Pollution class

normal

Degree of protection of housing

IP 30 to EN 60 529

General

Connection terminals

solid wires or prepared stranded wires
2 x 0.4-1.5 mm² or 1 x 2.5 mm²


Weight

0.25 kg

Color of housing front

white, NCS S 0502-G (RAL 9003)

Connection terminals

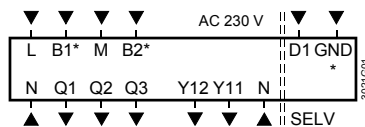

L, N Operating voltage AC 230 V

B1* Status input «Return air temperature sensor or external room temperature sensor QAA32»

M Measuring neutral «Return air temperature sensor QAA32» and «Changeover sensor»

B2* Status input «Changeover sensor»


- D1,GND* Status input for potential-free operating mode changeover switch
- Q1 Control output "Fan speed I" AC 230 V
- Q2 Control output "Fan speed II" AC 230 V
- Q3 Control output "Fan speed III" AC 230 V
- Y11 Control output "Valve" AC 230 V (N.O., for normally closed valves) or output for compressor
- Y12 Control output "Valve" AC 230 V (N.C., for normally open valves)

* Only with the RDF10

Connection diagram

Application:

2-pipe fan coil units

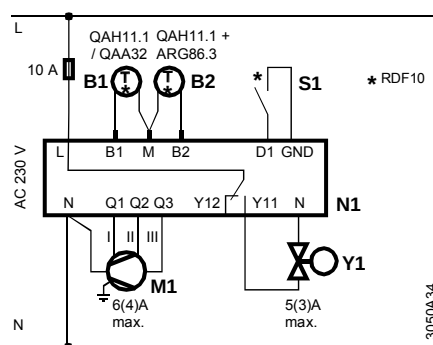


- B1* Return air temperature sensor (QAH11.1) or external room temperature sensor (QAA32)
- B2* Changeover sensor (temperature sensor QAH11.1 + changeover mounting kit ARG86.3)
- M1 3-speed fan
- N1 Room temperature controller RDF10/ RDF10.2
- S1* External operating mode changeover switch
- Y1 Zone valve

* Only with the RDF10

Application:

Compressors in DX type equipment

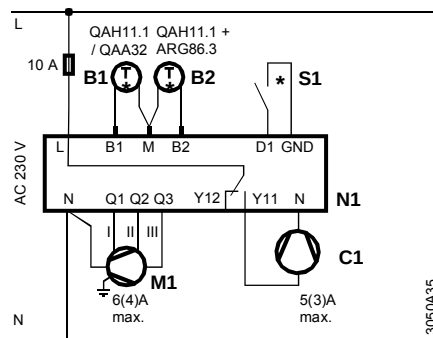


- B1* Return air temperature sensor (QAH11.1) or external room temperature sensor (QAA32)
- B2* Changeover sensor (temperature sensor QAH11.1 + changeover mounting kit ARG86.3)
- M1 3-speed fan
- N1 Room temperature controller RDF10
- S1* External operating mode changeover switch
- C1 Compressor

* Only with the RDF10

Note: The RDF10.2 may not be used for compressors in DX type equipment.

Dimensions

Controller

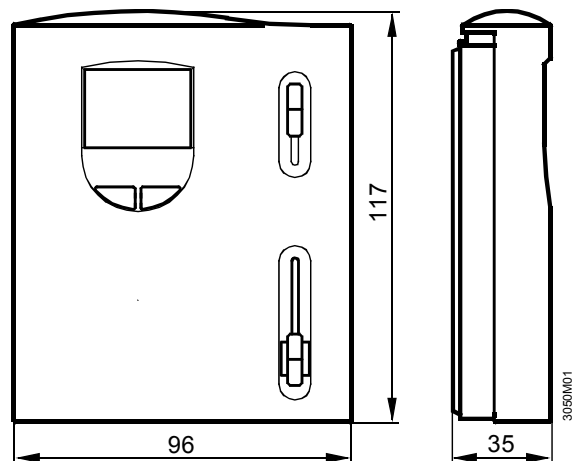

Base

